

# VIBRO-ACOUSTICS®

## OPERATION AND MAINTENANCE GUIDELINES

---

- ◆ Vibro-Acoustics Acoustic Louvers have no moving parts. Routine maintenance is not required.
- ◆ Acoustic louvers should be visually inspected at least once per year to insure that the airspace between the baffles is kept free from any obstruction.
- ◆ Any dirt build-up on the perforated metal may be vacuum cleaned or wiped clean with a damp cloth.
- ◆ Cleaning solutions which may affect the galvanized protection of the steel should not be used in any circumstance.
- ◆ If the acoustic louver has been structurally damaged, contact your local Vibro-Acoustics Sales Representative or the factory direct at 1-800-565-8401.