

## Operation and Maintenance

Vibro-Acoustics floating floors have no moving parts. Routine maintenance is not required. The perimeter of the floating floor slab and the perimeter of any penetrations should be inspected at least once per year to ensure the caulking at the isolation gap is still continuous. If any deterioration causing through cracking is observed, the caulking should be repaired or replaced as needed. If the floating floor has been structurally damaged, contact your local Vibro-Acoustics Sales Representative or the factory direct at 1-800-565-8401.