

# OPERATION AND MAINTENANCE GUIDELINES

- 
- > Vibro-Acoustics Acoustic Louvers have no moving parts. Routine maintenance is not required.
  - > Acoustic louvers should be visually inspected at least once per year to insure that the airspace between the baffles is kept free from any obstruction.
  - > Any dirt build-up on the perforated metal may be vacuum cleaned or wiped clean with a damp cloth.
  - > Cleaning solutions which may affect the galvanized protection of the steel should not be used in any circumstance.
  - > If the acoustic louver has been structurally damaged, contact your local Vibro-Acoustics Sales Representative or the factory direct at **1-800-565-8401**.