

OPERATION AND MAINTENANCE GUIDELINES

-
- > Vibro-Acoustics silencers have no moving parts. Routine maintenance is not required.
 - > Silencers should be visually inspected at least once per year to insure that the airspace between the baffles is kept free from any obstruction.
 - > Any dirt build-up on the perforated metal may be vacuum cleaned or wiped clean with a damp cloth.
 - > Cleaning solutions which may affect the galvanized protection of the steel should not be used in any circumstance.
 - > If the silencer has been structurally damaged, contact your local Vibro-Acoustics Sales Representative or the factory direct at **1-800-565-8401**.